



# GOLD PURITY CHECKING BALANCE

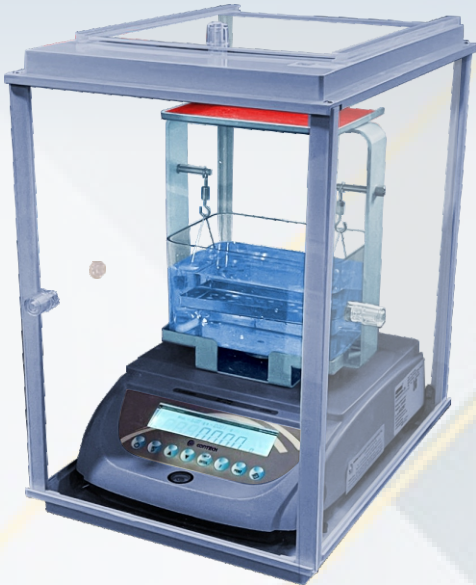

## Features

- ◆ Measurement based on Archimedes' principle incorporating High Precision electronic weighing scale.
- ◆ Accurate, Reliable and non destructive testing method.
- ◆ Provision to enter water temperature for temperature compensation of density value.
- ◆ Display of gold purity in % as well as karat.
- ◆ Gold purity checking in gold-copper-silver, gold-silver, gold-copper alloys.
- ◆ RS-232 interface for printer / computer connection.
- ◆ Spacious tank for big ornaments, special design of tank to reduce buoyancy error.
- ◆ Hollow ornaments, ornaments inlaid with stones cannot be checked.

Models	CAH-603
Capacity	600g
Readability	0.001g
Repeatability(+)	0.002g
Linearity(+)	0.003g

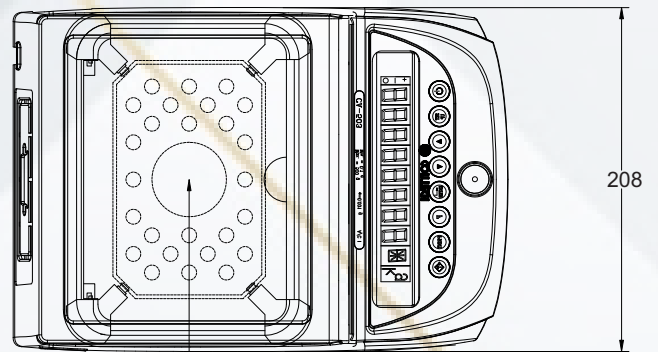

SS TRAY FOR SAMPLE HOLDER

